

EPX-410/EPX-420/EPX-430

4 CH Switch Pack Series

【User Manual】



Lite Puter Enterprise Co., Ltd.

Website: www.liteputer.com.tw

Email: sales@liteputer.com.tw

Index

CHAPTER ONE CAUTION.....	1
CHAPTER TWO INTRODUCTION.....	1
2-1 FEATURE	1
2-2 SPECIFICATION.....	1
2-3 DIMENSION	2
2-4 FUNCTION.....	2
2-5 WIRING DIAGRAM.....	3
2-6 SYSTEM DIAGRAM.....	4
CHAPTER THREE OPERATION	5
3-1 MEMORY INITIALIZATION	5
3-2 DMX START ADDRESS SETTING.....	5
3-3 CHANNEL STATUS CHECK	5
3-4 ID NO. SETTING	5
3-5 ZONE NO. SETTING	6
3-6 SYSTEM TIME SETTING	6
3-7 DELAY TIME SETTING	7
3-8 SCENE SETTING.....	7
3-9 CHANNEL'S SWITCH ON VALUE SETTING	8
3-10 SC5/SC6 OVERLAP SCENE FUNCTION ON/OFF SETTING	8
PRIMARY AND SECONDARY SCENE FUNCTION ON/OFF SETTING	8
3-11 TIMER SCENE SETTING	9
3-14 SOFTWARE VERSION CHECK	10
GUARANTEE	11

Chapter One Caution

- They must have good ventilation; otherwise they will overheat and can't operate normally.
- Room Temperature: below 35°C .
- Each channel's maximal output of EPX-410/EPX-420/EPX-430 can be 10A/20A/30A and can work continuously for a whole year.
- When they're installed in a rack, the internal temperature can't exceed 45°C .

Chapter Two Introduction

2-1 Feature

- Standard DMX-512 signal.
- Track-mounted. Manual setting available and it's easy to operate.
- 4 channels dry contact, each can be set as ON/OFF/AUTO mode individually.
Each channel's maximal output can be 10A/20A/30A.
- Up to 99 zones synchronization. (99 devices work together)
- Delay time setting (0.1S~10S) for each channel to avoid current surge.
- Connectable to ECP series control panels, each of them can work independently or synchronously.


2-2 Specification

- Power Supply: AC 90---240V
- Output: Maximal output of each channel is 10A/20A/30A
- Protocol: DMX-512/EDX
- Dimension: 158(W) x 59(H) x 87.5(D)mm
- Weight: 480g

2-3 Dimension




2-4 Function

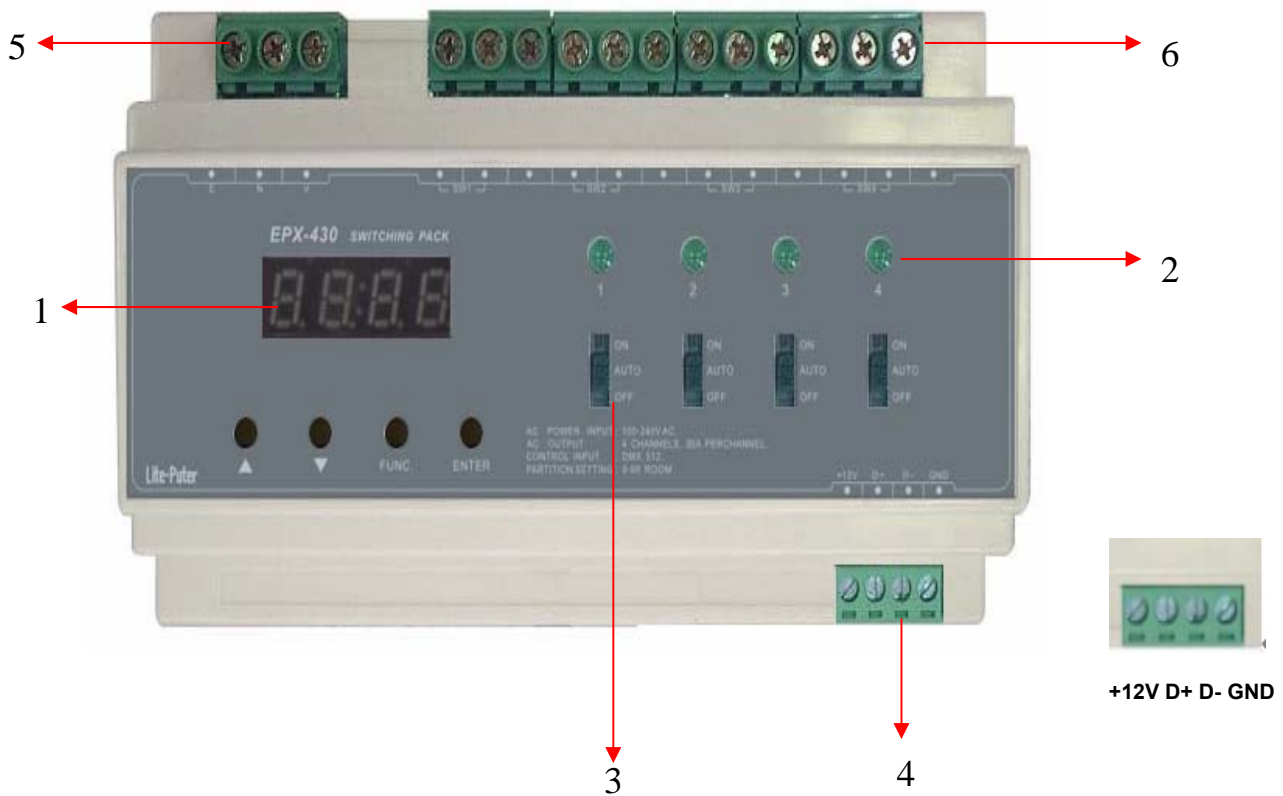

▲	Up , check channel value	1	LED display
▼	Down, check channel value	2	Channel status LED indicator
FUNC	Quit/enter function menu	3	Channel status selection switch ON: switch on AUTO: system control OFF: switch off
ENTER	Confirm, set DMX address	4	Signal input
5	Power input	6	Power output


2-5 Wiring Diagram

Power input/output terminal

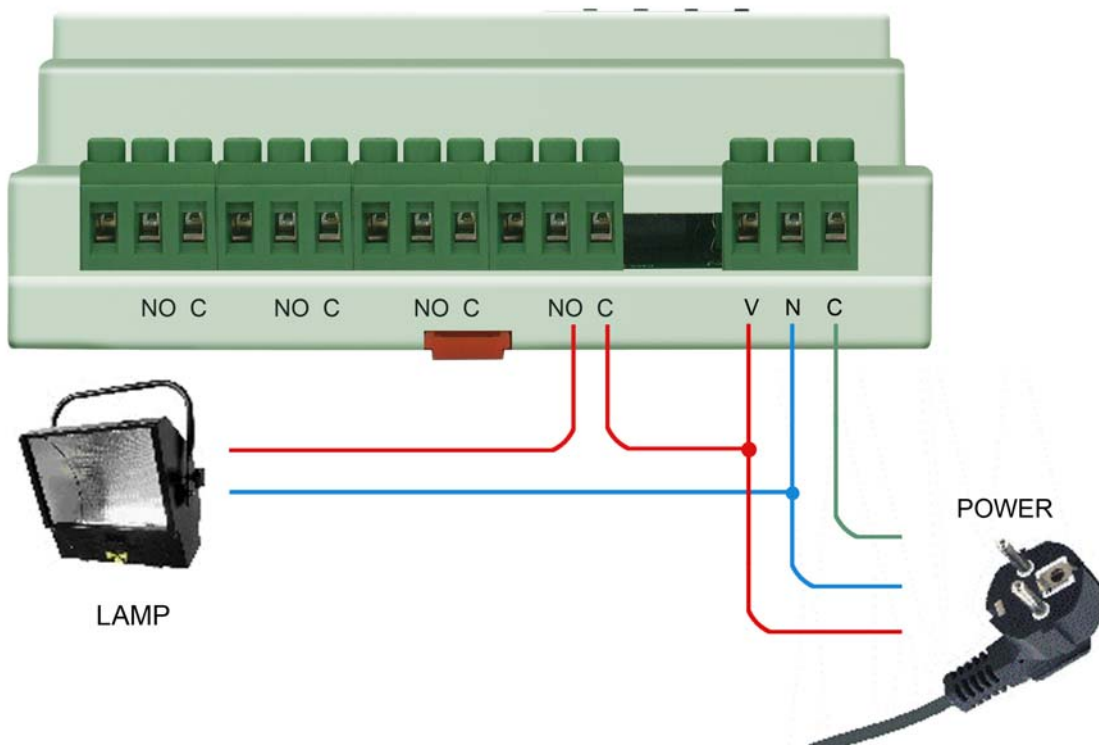

Notice: V: Live wire
 N: Neutral wire
 E: Earth wire

2-6 System Diagram

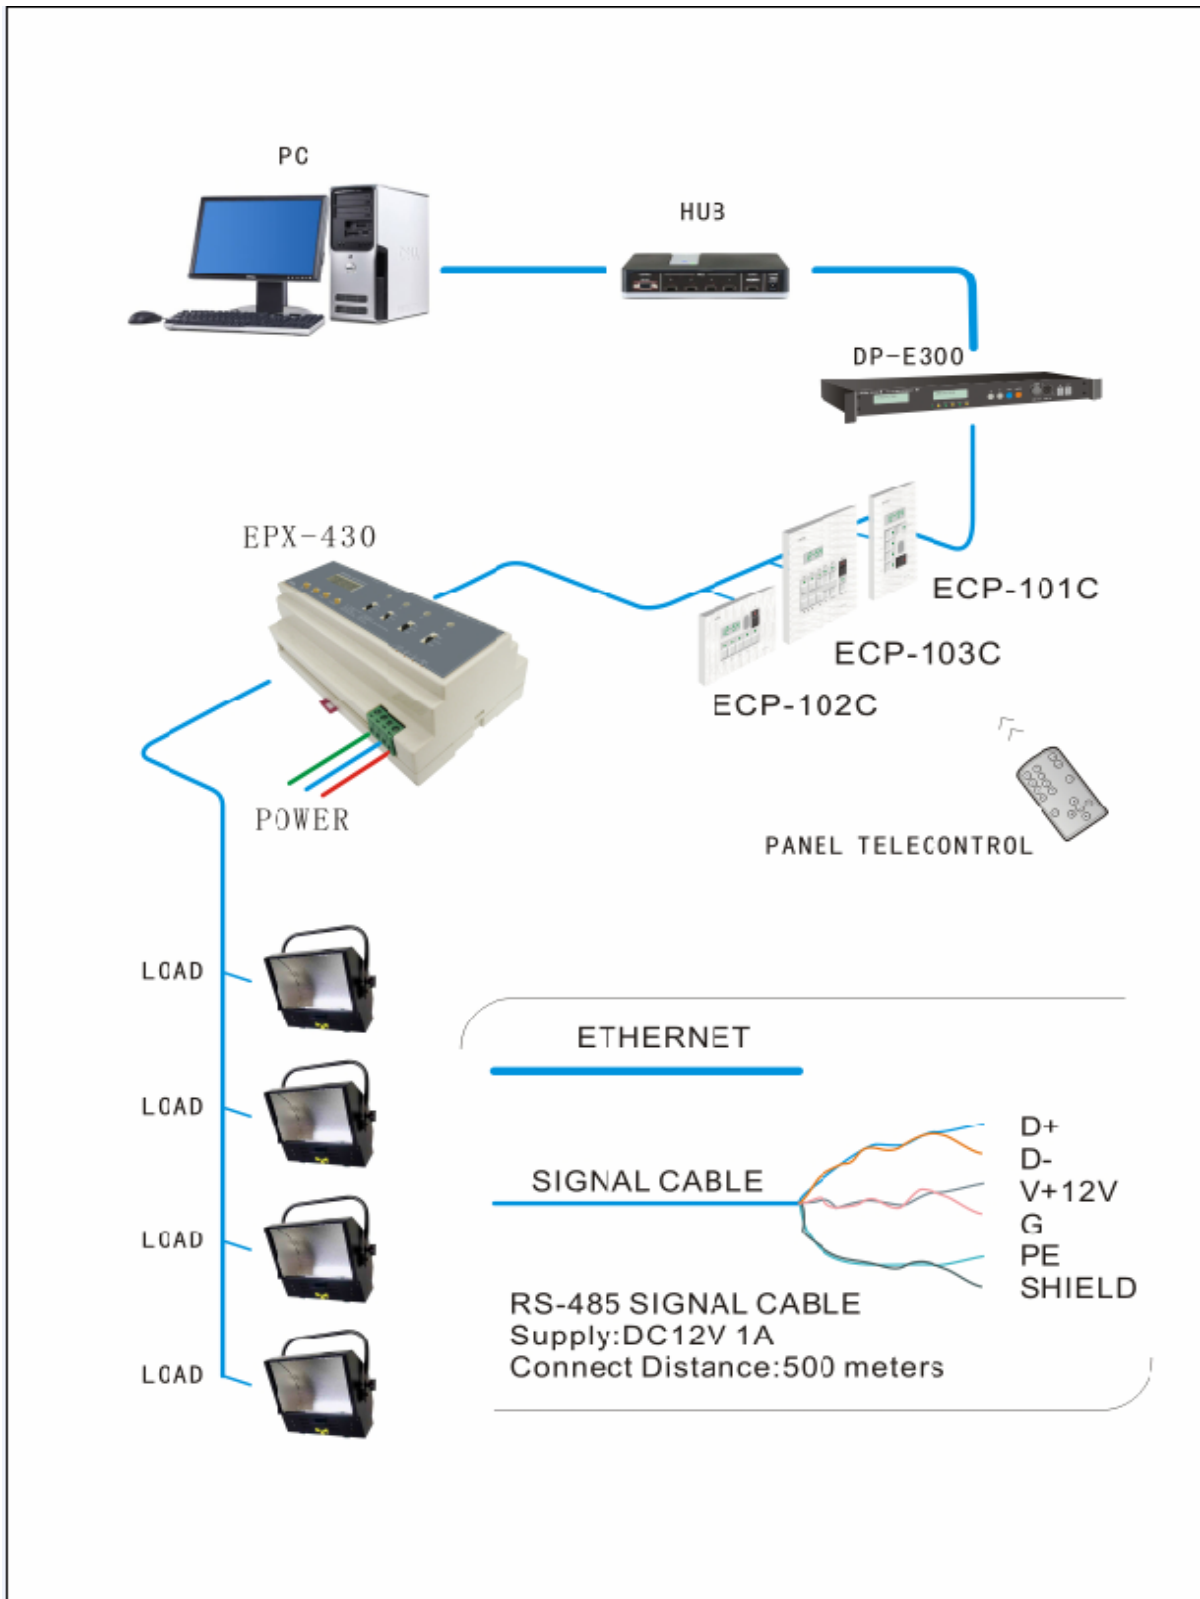

Chapter Three Operation

3-1 Memory Initialization

On the main page, press **【FUNC】** and **【DMX】** at the same time to enter memory initialization function.



Notice: If there is no DMX signal input, it will display system time.

3-2 DMX Start Channel Address Setting

Standard DMX console can output 512 channels and EPX-410/EPX-420/EPX-430 can use 4 continuous channels out of them as the output channel. The address of the first channel out of these 4 continuous channels is EPX-410/EPX-420/EPX-430's start channel address.

Press **【DMX】 + 【▲】** or **【▼】** to change DMX start address. For example, change DMX start channel address from 001 to 002,




3-3 Channel Status Check

On the main page, press **【▲】** or **【▼】** to enter channel status check.





First channel is on ON mode.

Second channel is on OFF mode.

3-4 ID No. Setting

Each EPX series device must have a ID No.. When one device's working alone, there is no need to adjust the ID No., but when several devices' working together, each device must have a different ID No..

STEP-1 On the main page , press **【FUNC】** once to enter ID No. setting.

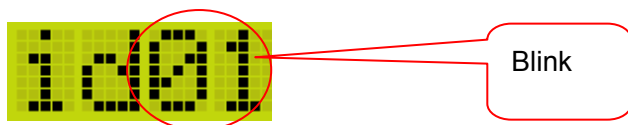

STEP-2 Press **【▲】** or **【▼】** to change the ID No..


STEP-3 After setting, press **【DMX】** to save.

3-5 Zone No. Setting

Definition of zone: The device must set the Zone No. before use, which consists of two parts, one is the zone no. and another is the start channel address.


For example: There are 4 EPX-410/EPX-420/EPX-430 (16 channels in total) in the first zone, the zone no. of each device should be 01-01,01-05,01-09,01-13 separately.

STEP-1 On the main page, press **【FUNC】** twice to enter zone no. setting.

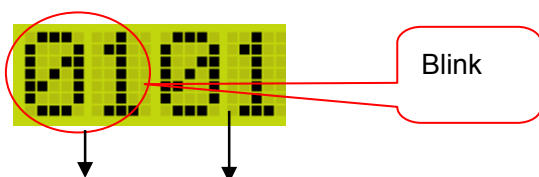


Zone no. Start channel address

Press **【▲】** or **【▼】** to change zone no.(up to 99 zone)first. After setting, press **【DMX】** to save.

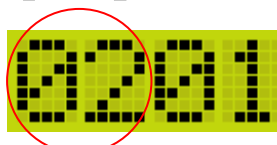


STEP-2 Press **【ENTER】** once again shift to change start channel address. Press **【▲】** or **【▼】** change the start channel address (up to 99 channel). After setting, press **【DMX】** to save. For example, change channel address from 02 to 03.

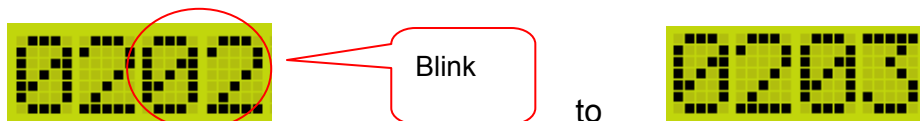

3-6 System time Setting

STEP-1 On the main page, press **【FUNC】** four times to enter system time setting. For example, it's 20:00 now.

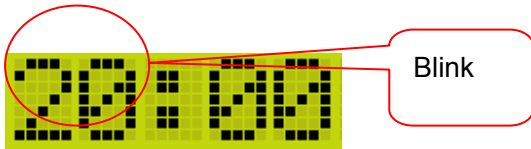

Hour Minute

Press **▲** or **▼** to change the hour.

STEP-2 Press **FUNC** once again shift to minute . Press **▲** or **▼** change the minute.

STEP-3 After setting, press **DMX** to save.

3-7 Delay Time Setting

Definition of delay time: when EPX-410/EPX-420/ EPX-430 receive the switch on or switch off signal, the relay will react after the preset delay time.

STEP-1 On the main page, press **FUNC** six times to enter delay time setting.



Delay Time (dL) Second

 
It means the delay time is 1 second.

STEP-2 Press **▲** or **▼** to change delay time(range from 0.1S~10S)

STEP-3 After setting, press **DMX** to save.

3-8 Scene Setting

STEP-1 On the main page, press **FUNC** seven times to enter scene setting.



Primary scene



Secondary scene

STEP-2 Press **▲** or **▼** to select the scene no.(SC1~SC6, SC1S~SC6S)

STEP-3 Edit the channel on the DMX console or EDX controller and press **DMX** on the EPX device to save the scene and use ECP series control panel to recall the scene.

Notice: SC1S~SC6S are the secondary scene 1~6. Only when the primary & secondary scene function is on(F5-02), SC1S~SC6S can be edit and recall;

SC1~SC6 are the primary scene 1~6. When the primary & secondary

scene function is off, user only can edit and recall SC1~SC6.

3-9 Channel's Switch On Value Setting

STEP-1 On the main page, press **【FUNC】** eight times to enter the switch on value setting.



It means the channel will be switched on when its value over 10%.

STEP-2 Press **【▲】** or **【▼】** to change the switch on value from 10% to 60%.

STEP-3 After setting, press **【DMX】** to save.

3-10 SC5/SC6 Overlap Scene Function ON/OFF Setting Primary and Secondary Scene Function ON/OFF Setting

Overlap Scene Function:

On usual, when user recall a scene, the previous scene will be replaced. This function is for overlap SC5 or SC6 to another scene. If you recall one of SC1-4 first, then recall SC5 or SC6, the later one will overlap to the previous one(SC1-4), so user will see two scenes at the same time. If there is any channel that is in both scenes, it will be outputted at the higher value.

For example:

SC2: first channel of EPX-410/EPX-420/EPX-430 is OFF

SC5: first channel of EPX-410/EPX-420/EPX-430 is ON

When overlap SC5 to SC2, the first channel is ON.

Primary and Secondary Scene Function

On usual, press a scene button (1-6) on the control panel, the corresponding scene will be call out; if you press the same button once again, it will be the same scene call out. When this function is on, press a scene button, the corresponding scene will be call out and the press the same button again, a different scene will be call out. Press the scene button to recall the two scenes alternatively. These two scenes are call out by the same scene button is the primary and secondary scene.

This function is mainly used for control curtain.

For example,

Channel 1 and 2 control curtain A, Channel 3 and 4 control curtain B.

Primary scene 1 (SC1): CH1 is ON, CH2 is OFF, CH3 is ON and CH4 is OFF.

Secondary scene 1S (SC1S): CH1 is OFF, CH2 is ON, CH3 is OFF and CH4 is ON.

Press SC1 button, curtain A and B go up, press the button again curtain A and B go down.

Notice: when the current scene is the OFF scene, press any scene button then the prime scene will be call out first.

 
STEP-1 On the main page, press **【FUNC】** nine times to enter function setting.



Overlap scene function/
Primary and secondary scene
function is OFF



Overlap scene
function is ON



Primary and secondary
scene function is ON

STEP-2 Press **【▲】** or **【▼】** to select from ON and OFF.

 
STEP-3 After setting, press **【DMX】** to save.

Notice: After memory initialization, the default setting for these two functions is OFF.

3-11 Timer Scene Setting

Notice: There are 20 timer scenes at most.

STEP-1 On the main page, press **【FUNC】** ten times to enter timer scene setting.



01 stands for the first timer scene

STEP-2 Press **【DMX】** to edit the first timer scene's executing time, scene no. and zone no..



Blink

 
Blink



Press **【▲】** or **【▼】** to change hour first and then press **【FUNC】** shift to minute.

After executing time setting, press **【FUNC】** to enter scene no. and zone no. editing.

Press **【▲】** or **【▼】** to change the scene no. and zone no..



Scene no. editing



Zone no. editing

Press **【▲】** or **【▼】** to set other timer scenes.

After setting, press **【DMX】** to save and then press **【FUNC】** jump to timer on/off setting page or software version check page. Then press **【DMX】** go back to the main page.

3-12 Delete Timer Setting

STEP-1 On the main page, press **【FUNC】** 11 times to enter delete scene setting.



 
01 stands for the first timer.

STEP-2 Press **【▲】** or **【▼】** to select the timer.

STEP-3 Press **【DMX】** to delete the timer(include the timer scene and it's zone no.) and go back to the main page.

3-12 Timer ON/OFF Setting

STEP-1 On the main page, press **【FUNC】** 12 times to enter timer on/off setting. Then press **【▲】** or **【▼】** to select from on and off.



Timer is on



Timer is off.

STEP-3 After setting, press **【DMX】** to save.

3-14 Software Version Check

Press **【FUNC】** 13 times to check the software version.

Guarantee

Lite-Puter promises to fulfill the following acceptances:

1. Lite-Puter is only responsible for EPX-410/EPX-420/EPX-430 itself.
2. Lite-Puter guarantees to keep Lite-Puter's fault products caused by techniques, materials and any other logical reasons in good repair for free within a year since the distributing date.
3. We do not offer door-visiting service. If the trouble appears in Lite-Puter's products, please deliver the equipment to local distributors or Taipei headquarter.

***** Special Statement*****

Any fault caused by false usage, imprudence (collision or inadequate installation) or force majeure factors are not in Lite-Puter's service.

Revision Record

Version	Record
D	EPX series user manual

Issued on: July, 2010

Lite-Puter

World Headquarter:

Lite Puter Enterprise Co., Ltd.

Address: 9F, No. 196, Sec. 3, Da Tung Rd., Shijr City, Taipei, Taiwan

Zip Code: 22103

Tel: +886-2-86472828

Fax: +886-2-86472727

Website: www.liteputer.com.tw

E-mail: sales@liteputer.com.tw

Shanghai Factory:

Lite Puter Technology (Shanghai) Co., Ltd.

Address: Building B5, No. 298, Lane 3509, Hongmei S. Road, Shanghai, China

Zip Code: 201108

Tel: +86-21-54408210

Fax: +86-21-64978079

Shanghai Sales Center:

Address: Room 701, Building Gem, No. 487, Tianlin Road, Shanghai, China

Zip Code: 201103

Tel: +86-21-33674316/33674850

Fax: +86-21-33674013

Website: www.liteputer.com.cn

E-mail: sales_china@liteputer.com.tw