


EPX-210

2CH Switch Pack

【User Manual】

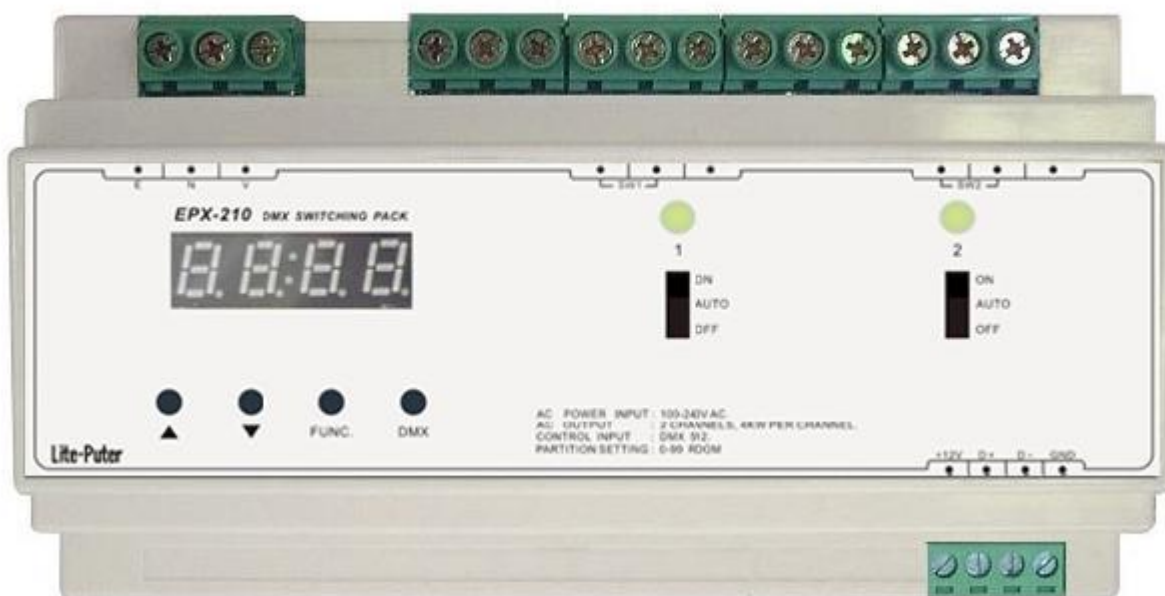

Lite Puter Enterprise Co., Ltd.

Website: www.liteputer.com.tw

Email: sales@liteputer.com.tw

Index

1 Caution	1
2 Introduction	1
2-1 Feature.....	1
2-2 Specification.....	1
2-3 Dimension	2
2-4 Function	2
2-5 Wiring Diagram	3
2-6 System Diagram.....	4
3 Operation	5
3-1 Memory Initialization	5
3-2 DMX Start Channel Address Setting	5
3-3 Channel Status Check.....	5
3-4 ID No. Setting.....	6
3-5 Zone No. Setting	6
3-6 System time Setting	7
3-7 Delay Time Setting	7
3-8 Scene Setting.....	7
3-9 Channel's Switch On Value Setting	8
3-10 SC5/SC6 Overlap Scene Function ON/OFF Setting	8
Primary and Secondary Scene Function ON/OFF Setting	8
3-11 Timer Scene Setting	9
3-12 Delete Timer Setting.....	10
3-13 Timer ON/OFF Setting	10
3-14 Software Version Check.....	11
Limited Warranty	11

1 Caution

- The device must have good ventilation; otherwise it will overheat and can't operate normally.
- Room Temperature: below 35°C .
- The maximal output of each channel is 10A and it can work continuously for a whole year.
- When it's installed in a rack, the internal temperature can't exceed 45°C .

2 Introduction


2-1 Feature

- Standard DMX-512 signal.
- Track-mounted. Manual setting available and it's easy to operate.
- 2 channels dry contact, each can be set as ON/OFF/AUTO mode.
- Each channel's maximal output is 10A.
- Up to 99 zones synchronization. (99 devices work together)
- Delay time setting (0.1S~10S) for each channel to avoid current surge.
- Connectable to ECP series control panels, each of them can work independently or synchronously.


2-2 Specification

- Power Supply: AC 90---240V
- Output: Maximal output of each channel is 10A
- Protocol: DMX-512/EDX
- Dimension: 158(W) x 59(H) x 87.5(D)mm
- Weight: 440g
- Fuse: PCB No.:OC20-2A5 F3(Tube fuse 2.5A,250V)
PCB No.:RA08B F1,F2(Resettable fuse 0.1A 60V)

2-3 Dimension

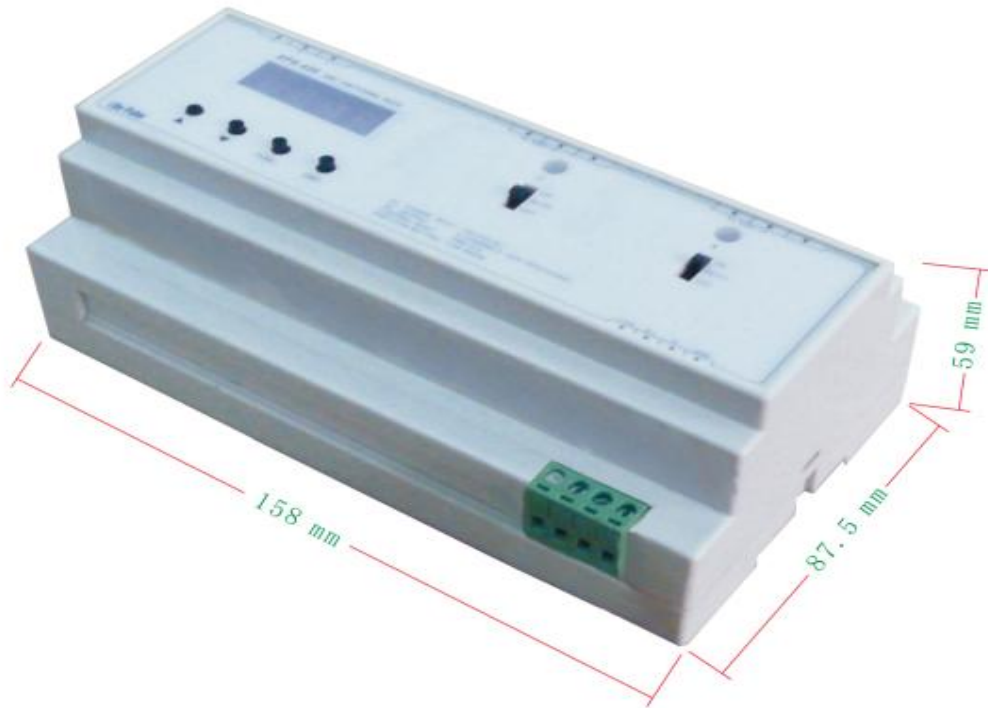

2-4 Function

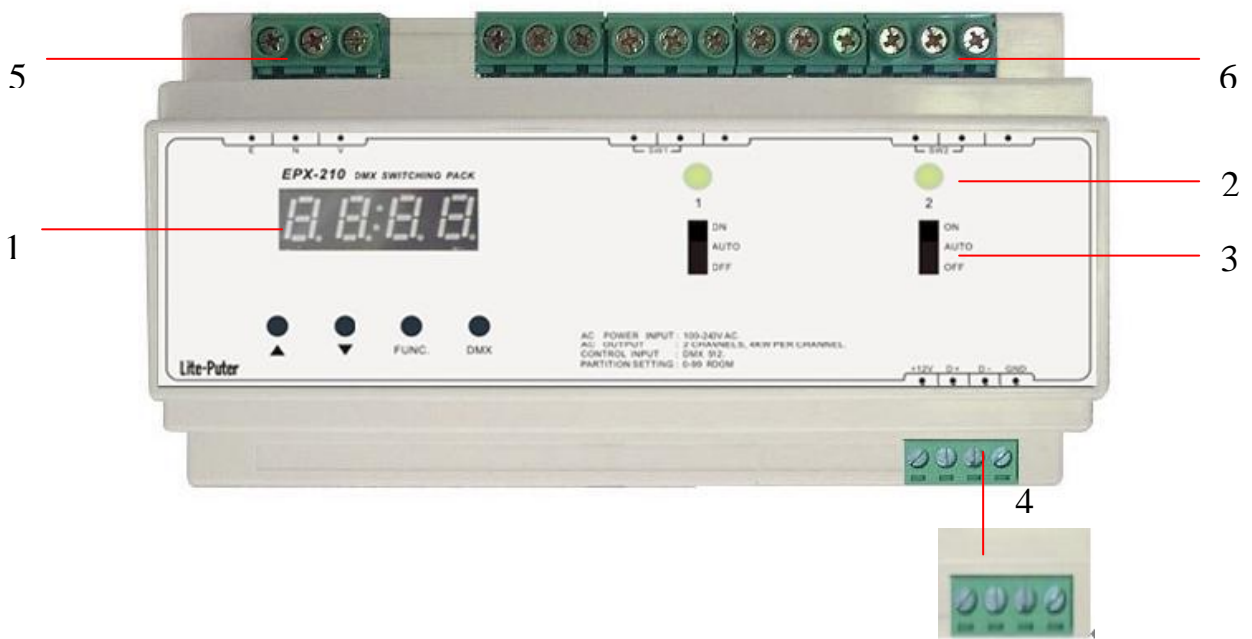


+12V D+ D- GND

▲	Up , check channel value	1	LED display
▼	Down, check channel value	2	Channel status LED indicator
FUNC	Quit/enter function menu	3	Channel status selection switch ON: switch on AUTO: system control OFF: switch off
ENTER	Confirm, set DMX address	4	Signal input
5	Power input	6	Power output

2-5 Wiring Diagram


Power input/output terminal

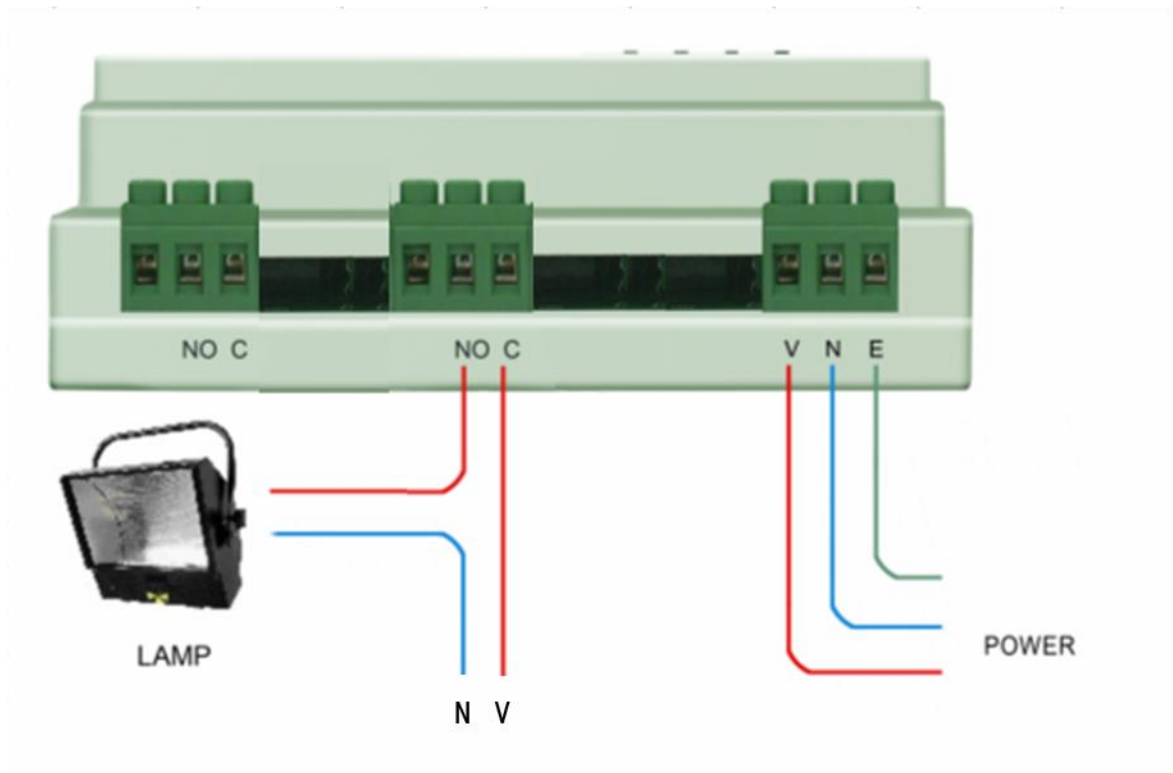

Notice: V: Live wire
 N: Neutral wire
 E: Earth wire

Attention: please make sure that the power for the EPX-210 and loads was shut down before maintenance; otherwise you will get an electrical shock.

2-6 System Diagram

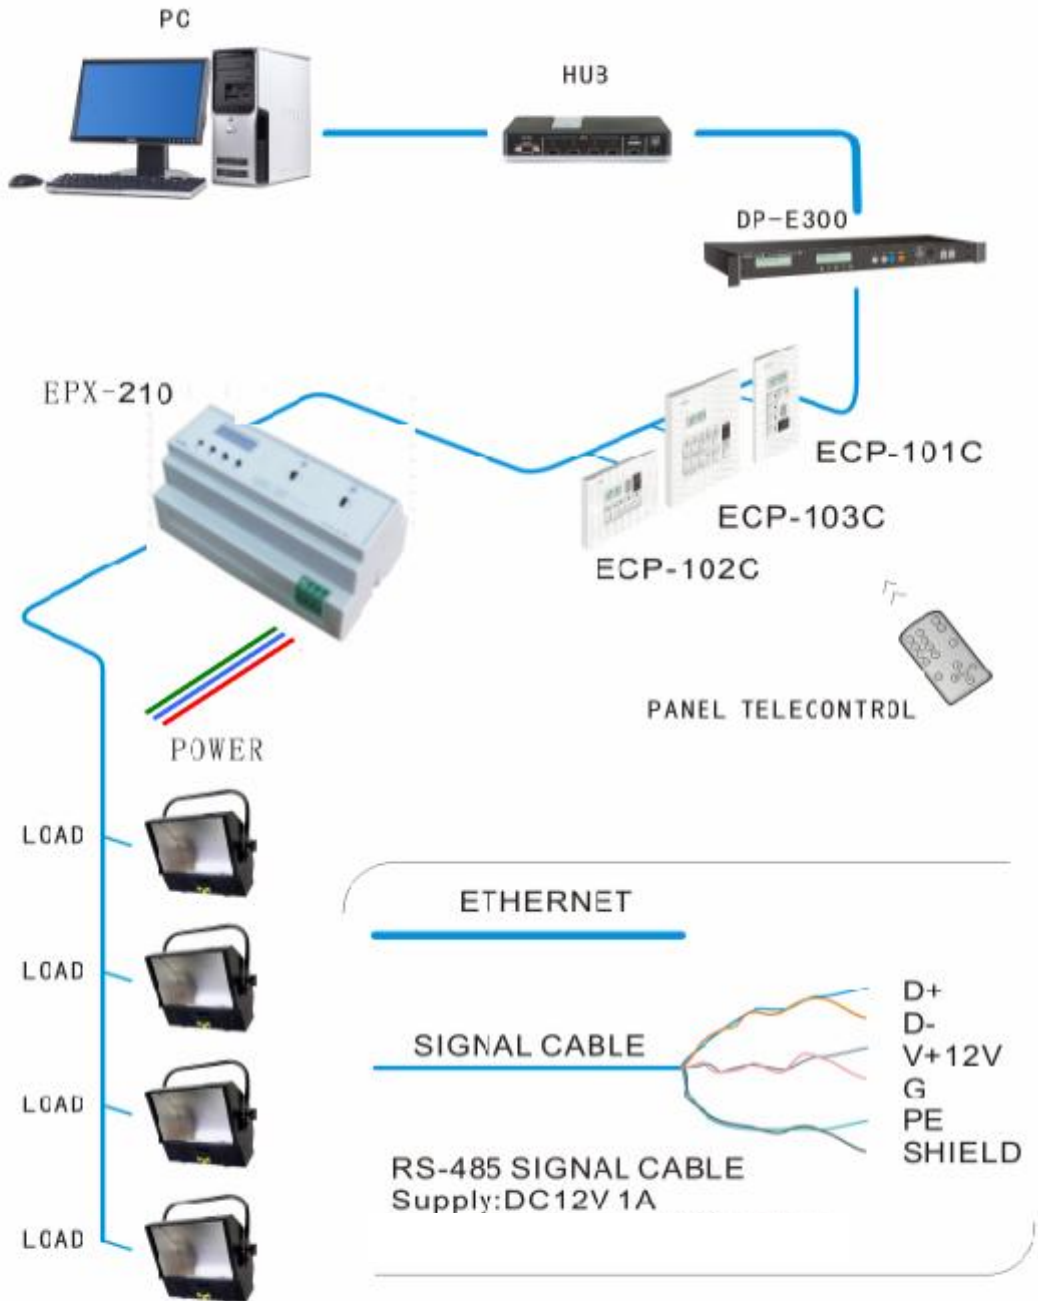

3 Operation

3-1 Memory Initialization

On the main page, hold **【FUNC】** and **【DMX】** for 5s at the same time to enter memory initialization function.




Notice: If there is no DMX signal input, it will display system time.

3-2 DMX Start Channel Address Setting

Standard DMX console can output 512 channels and EPX-210 can use 2 continuous channels out of them as the output channel. The address of the first channel out of these 2 continuous channels is EPX-210's start channel address.

Press **【DMX】+【▲】** or **【▼】** to change DMX start address. For example, change DMX start channel address from 001 to 002,

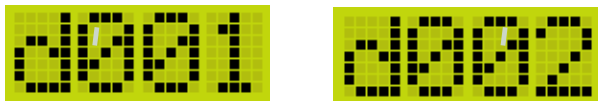

Notice: Press **【DMX】** once to check the DMX address.

3-3 Channel Status Check

On the main page, press **【▲】** or **【▼】** to enter channel status check.



First channel is on ON mode.

Second channel is on OFF mode.

3-4 ID No. Setting

Each EPX series device must have a ID No.. When one device's working alone, there is no need to adjust the ID No., but when several devices' working together, each device must have a different ID No..

STEP-1 On the main page , press **【FUNC】** once to enter ID No. setting.




STEP-2 Press **【▲】** or **【▼】** to change the ID No..

STEP-3 After setting, press **【DMX】** to save.


3-5 Zone No. Setting

Definition of zone: The device must set the Zone No. before use, which consists of two parts, one is the zone no. and another is the start channel address. For example: There are 4 EPX-210 (8 channels in total) in the first zone, the zone no. of each device should be 01-01,01-03,01-5,01-07 separately.

STEP-1 On the main page, press **【FUNC】** twice to enter zone no. setting.

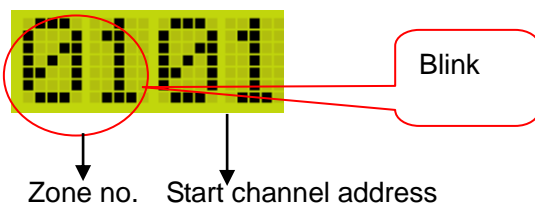


Press **【▲】** or **【▼】** to change zone no.(up to 99 zone). After setting, press **【DMX】** to save.

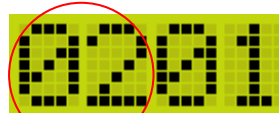


STEP-2 Press **【FUNC】** once again shift to change start channel address. Press **【▲】** or **【▼】** change the start channel address (up to 99 channel). After setting, press

【DMX】 to save. For example, change channel address from 02 to 03.

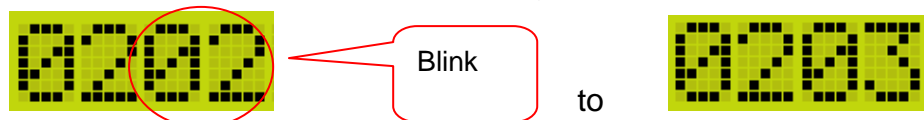

3-6 System time Setting

STEP-1 On the main page, press **【FUNC】** four times to enter system time setting. For example, it's 20:00 now.

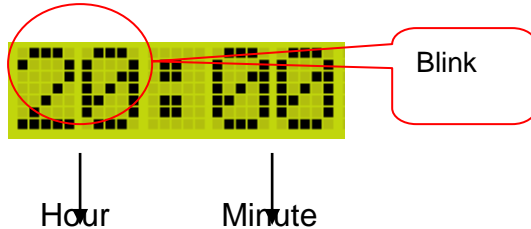

Press **【▲】** or **【▼】** to change the hour.


STEP-2 Press **【FUNC】** once again shift to minute . Press **【▲】** or **【▼】** change the minute.

STEP-3 After setting, press **【DMX】** to save.

3-7 Delay Time Setting

Definition of delay time: when EPX-210 receive the switch on or switch off signal, the relay will react after the preset delay time.

STEP-1 On the main page, press **【FUNC】** six times to enter delay time setting.

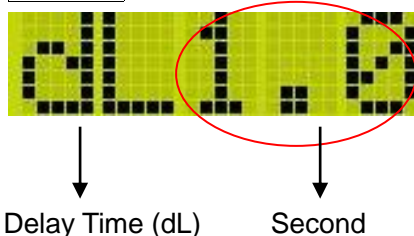

It means the delay time is 1 second.

STEP-2 Press **【▲】** or **【▼】** to change delay time(range from 0.1S~10S)

STEP-3 After setting, press **【DMX】** to save.

3-8 Scene Setting

STEP-1 On the main page, press **【FUNC】** seven times to enter scene setting.



Primary scene



Secondary scene

scene

STEP-2 Press **【▲】** or **【▼】** to select the scene no.(SC1~SC6, SC1S~SC6S)

STEP-3 Edit the channel on the DMX console, EDX controller or ECP control panel and press **【DMX】** on the EPX device to save the scene and use ECP series control panel to recall the scene.

Notice: SC1S~SC6S are the secondary scene 1~6. Only when the primary &

secondary scene function is on(F5-02), SC1S~SC6S can be edited and recall;
 SC1~SC6 are the primary scene 1~6. When the primary & secondary scene function is off, user only can edit and recall SC1~SC6.

3-9 Channel's Switch On Value Setting

STEP-1 On the main page, press **【FUNC】** eight times to enter the switch on value setting.



It means the channel will be switched on when its value over 10%.

STEP-2 Press **【▲】** or **【▼】** to change the switch on value from 10% to 60%.

STEP-3 After setting, press **【DMX】** to save.

3-10 SC5/SC6 Overlap Scene Function ON/OFF Setting

Primary and Secondary Scene Function ON/OFF Setting

Overlap Scene Function:

On usual, when user recall a scene, the previous scene will be replaced. This function is for overlap SC5 or SC6 to another scene. If you recall one of SC1-4 first, then recall SC5 or SC6, the later one will overlap to the previous one(SC1-4), so user will see two scenes at the same time. If there is any channel that is in both scenes, it will be outputted at the higher value.

For example:

SC2: first channel of EPX-210 is OFF

SC5: first channel of EPX-210 is ON

When overlap SC5 to SC2, the first channel is ON.

Primary and Secondary Scene Function

On usual, press a scene button (1-6) on the control panel, the corresponding scene will be call out; if you press the same button once again, it will be the same scene call out. When this function is on, press a scene button, the corresponding scene will be call out and the press the same button again, a different scene will be call out. Press the scene button to recall the two scenes alternatively.

These two scenes are call out by the same scene button is the primary and secondary scene.

This function is mainly used for control curtain.

For example,

Channel 1 and 2 control curtain ,

Primary scene 1 (SC1): CH1 is ON, CH2 is OFF;


Secondary scene 1S (SC1S): CH1 is OFF, CH2 is ON.

Press SC1 button, curtain go up, press the button again curtain go down.
(The curtain can't be stopped on the process of going up or going down.)


Notice: when the current scene is the OFF scene, press any scene button then the primary scene will be call out first.

Notice: if the motors of curtain or screen has the clockwise & anticlockwise rotating interlocking function, user can connect the motors to EPX device directly; if not, user must use extra relay.

STEP-1 On the main page, press **【FUNC】**nine times to enter function setting.

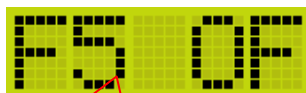

Overlap scene function/
Primary and secondary scene
function is OFF

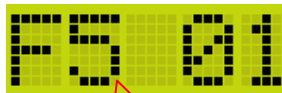

Overlap scene
function is ON



Primary and secondary
scene function is ON

STEP-2 Press **【▲】** or **【▼】** to select from ON and OFF.


STEP-3 After setting, press **【DMX】** to save.

Notice: After memory initialization, the default setting for these two functions is OFF.

3-11 Timer Scene Setting


Notice: There are 20 timer scenes at most.

STEP-1 On the main page, press **【FUNC】** ten times to enter timer scene setting.

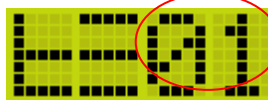

01 stands for the first timer scene

STEP-2 Press **【DMX】** to edit the first timer scene's executing time, scene no. and zone no..

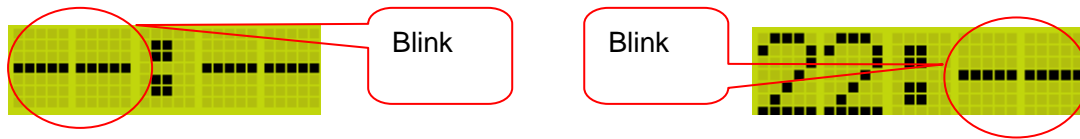

Press **【▲】** or **【▼】** to change hour first and then press **【FUNC】** shift to minute.

After executing time setting, press **【FUNC】** to enter scene no. and zone no.

editing. Press **【▲】** or **【▼】** to change the scene no. and zone no..



Press **【▲】** or **【▼】** to set other timer scenes.

After setting, press **【DMX】** to save and then press **【FUNC】** shift to timer on/off setting page or software version check page. Then press **【DMX】** go back to the main page.

3-12 Delete Timer Setting

STEP-1 On the main page, press **【FUNC】** 11 times to enter delete scene setting.



STEP-2 Press **【▲】** or **【▼】** to select the timer.

STEP-3 Press **【DMX】** to delete the timer(include the timer scene and it's zone no.) and go back to the main page.

3-13 Timer ON/OFF Setting

STEP-1 On the main page, press **【FUNC】** 12 times to enter timer on/off setting. Then press **【▲】** or **【▼】** to select from on and off.



STEP-3 After setting, press **【DMX】** to save.

3-14 Software Version Check

Press **【FUNC】** 13 times to check the software version.

Limited Warranty

1. Lite-Puter is only responsible for the product itself.
2. Lite-Puter guarantees to keep Lite-Puter's from manufacturing defects within a year since the distributing date.
3. Lite-Puter does not offer on-site service. If the defects appears
In Lite-Puter's product, please deliver the product to local distributors or to Taipei headquarters.
4. The warranty does not cover:
 - a. Any fault caused by false usage, imprudence (collision, inadequate installation or adjustment, insufficient ventilation, or improper repairs)
 - b. Force majeure factors (*flooding, earthquake, thunder, volcanic eruption, tsunami or other factors beyond Lite-Puter control*).
 - c. The cost of installing, reinstalling, adjusting, repairing, or reprogramming the product.
 - d. Other products or devices which are offered by Lite-Puter or not by Lite-Puter.
5. Lite-Puter does not warrant the product will operate without interruption or being free of error.

Revision Record

Version	Record
A	First Version
B	Add notice to 3-10
C	Change 2-2

Issued on: May, 2011

Lite-Puter

World Headquarter:

Lite Puter Enterprise Co., Ltd.

Address: 11F, No. 189, Gangqian Rd., Neihu Dist., Taipei City, Taiwan

Zip Code: 11494

Tel: +886-2-27998099

Fax: +886-2-27993828

Website: www.liteputer.com.tw

E-mail: sales@liteputer.com.tw

Shanghai Factory:

Lite Puter Technology (Shanghai) Co., Ltd.

Address: Building B5, No. 298, Lane 3509, Hongmei S. Road, Shanghai, China

Zip Code: 201108

Tel: +86-21-54408210

Fax: +86-21-64978079

Shanghai Sales Center:

Address: Room 701, Building Gem, No. 487, Tianlin Road, Shanghai, China

Zip Code: 201103

Tel: +86-21-33674316/33674850

Fax: +86-21-33674013

Website: www.liteputer.com.cn

E-mail: sales_china@liteputer.com.tw